HEMBRY CREEK

INSTALLATION INSTRUCTIONS
BLOX™ Combo
VANITY

HCK-BLOX-DRG30DWVC1

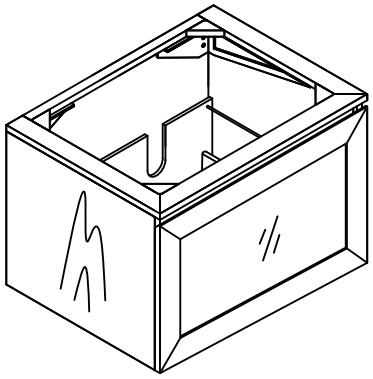

THANK YOU FOR CHOOSING HEMBRY CREEK

Please take a few minutes to review this manual before you start installation. If you encounter any installation problems, please don't hesitate to contact us. Before you begin, please observe all local building codes. Unpack the new product and inspect for damage. The appearance of your vanity may differ from the illustrations in this guide. This instructions still apply. Please ensure the finished wall is straight and plumb and the floor is flat and perpendicular to the finished wall.

SUGGESTED TOOLS AND MATERIALS

Philips Screwdriver

Level

Drill

Tape Measure

Safety Glasses

ROUGH-IN DIMENSIONS

Model #	X (inch)
BLOX-DRG30XX	30”

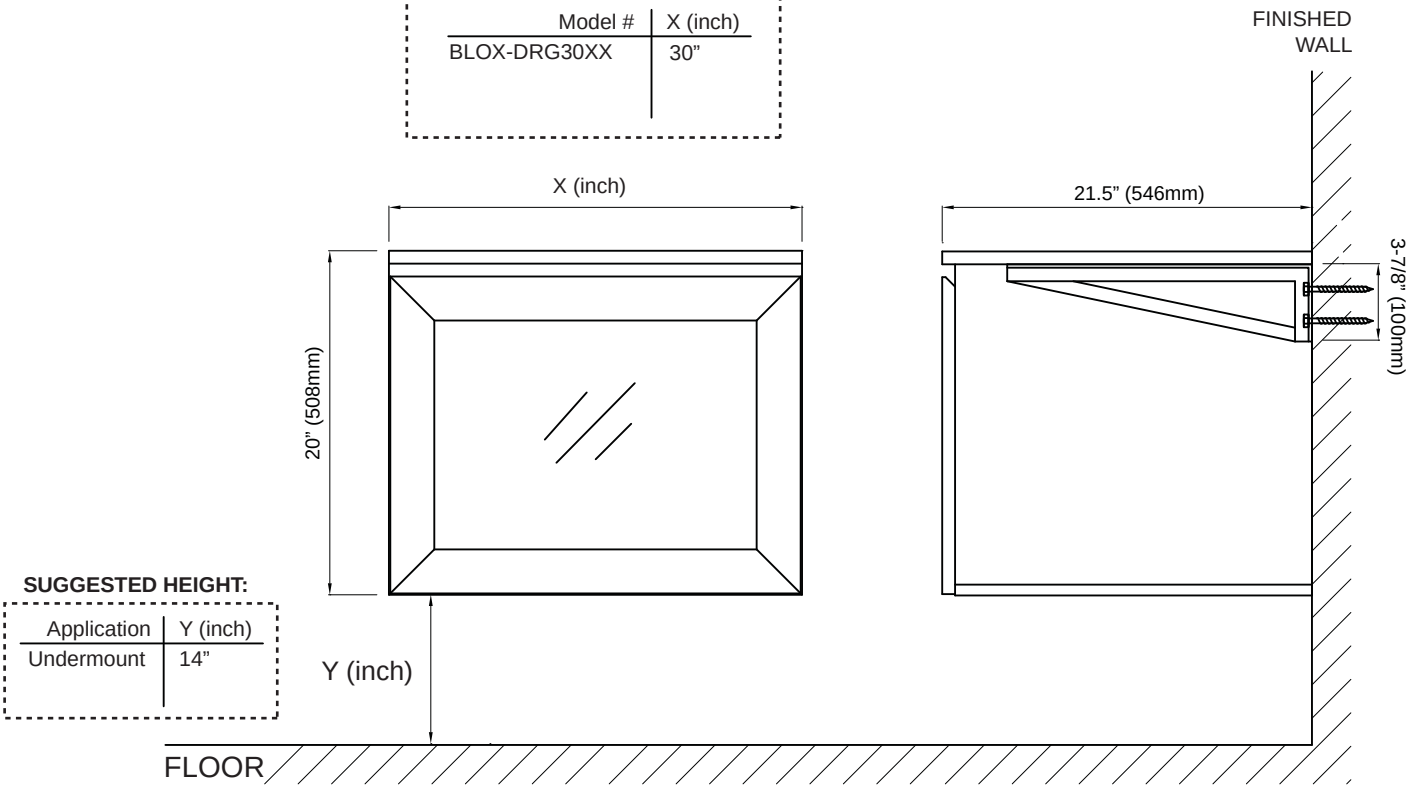

SUGGESTED HEIGHT:

Application	Y (inch)
Undermount	14”

WALL PREPARATION

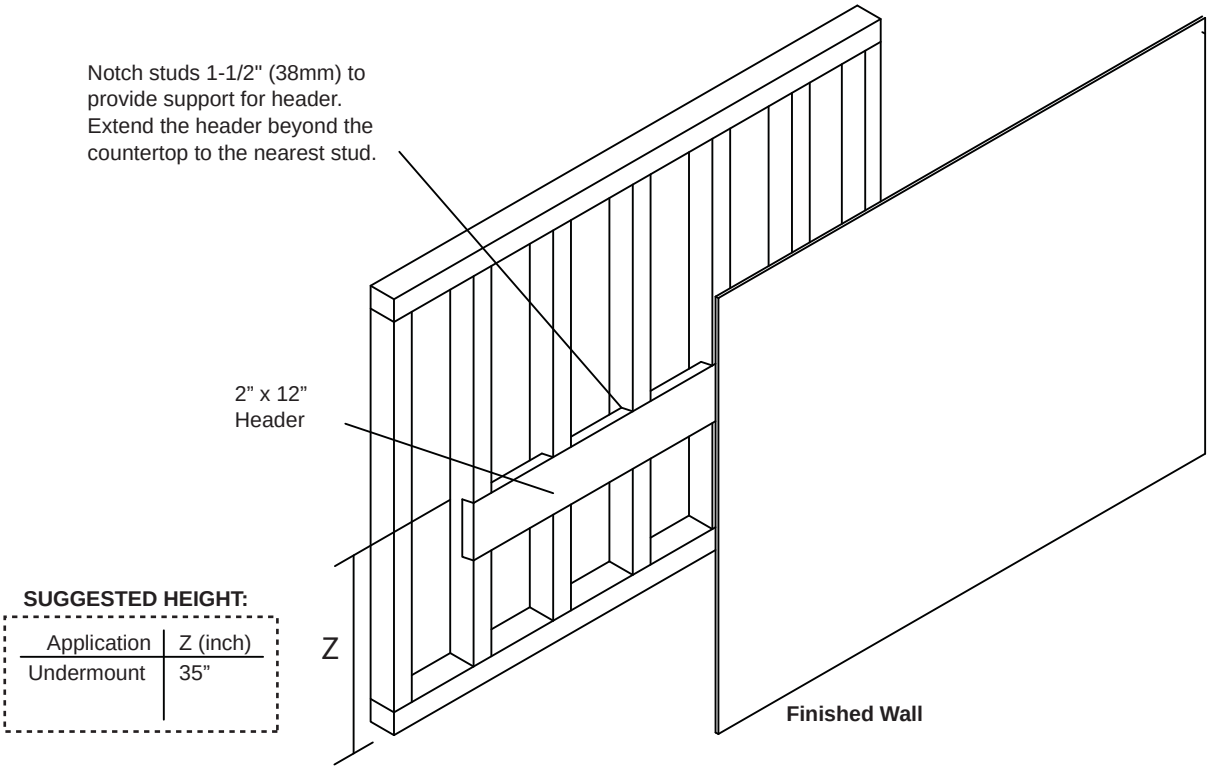
Notch studs 1-1/2" (38mm) to provide support for header. Extend the header beyond the countertop to the nearest stud.
2” x 12” Header
Z
Finished Wall

SUGGESTED HEIGHT:

Application	Z (inch)
Undermount	35”

INSTALLATION INSTRUCTIONS

1.

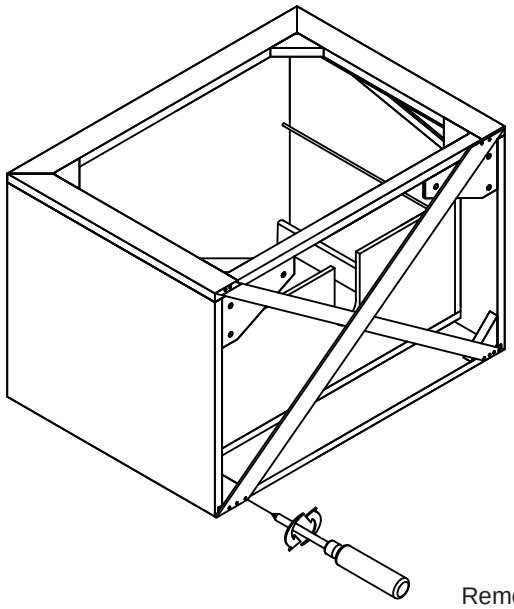

2.

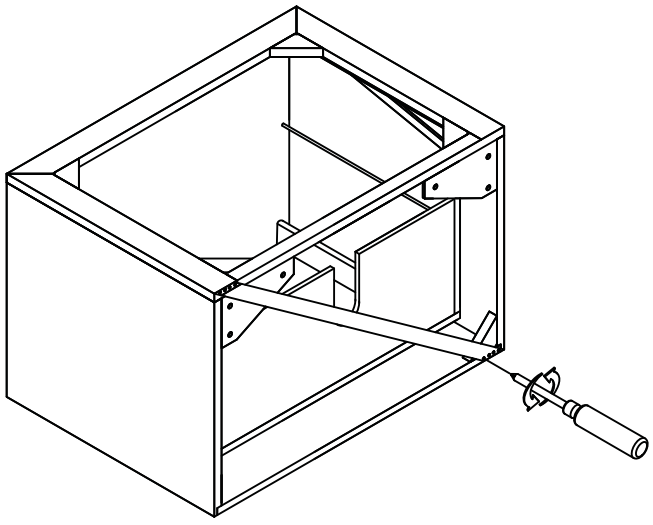

Remove wood supports from the back of vanity.

INSTALLATION INSTRUCTIONS

3.

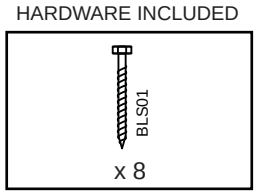

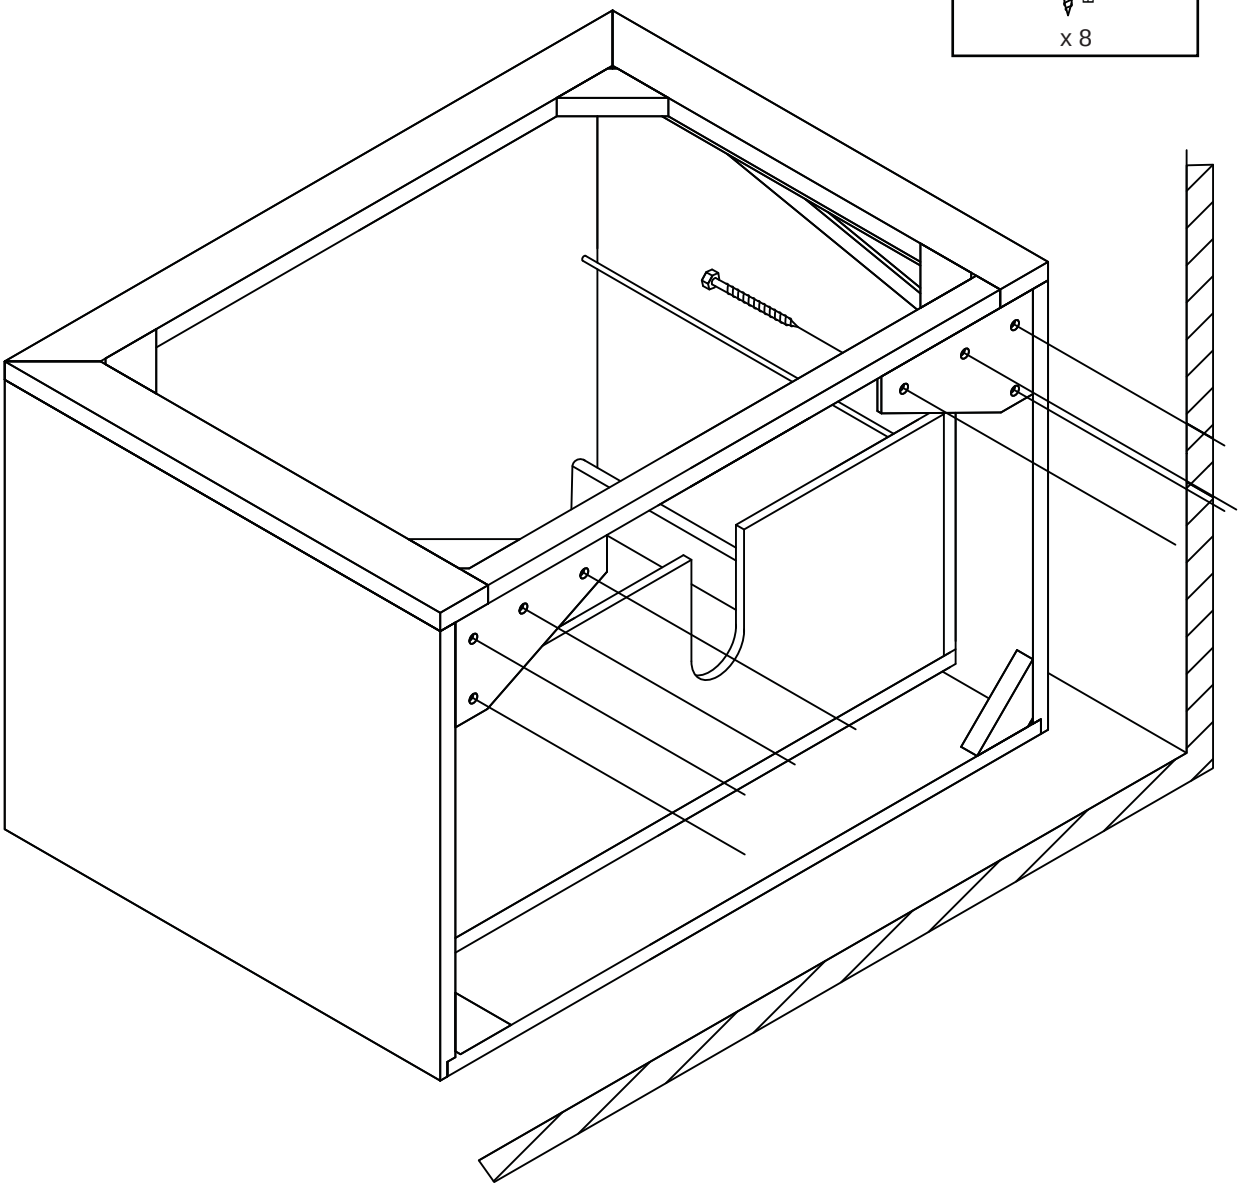

Level the vanity with a leveler and attach the brackets to the 2 x 12 header using screws provided.

CARE AND CLEANING

- To maintain the beauty of the finish, avoid placing the furniture in direct sunlight, as sunlight causes fading. Also avoid extreme changes in temperature by arranging furniture away from radiators, heat and air vents, and air conditioning units. Avoid placing furniture directly under windows.
- Dust the vanity frequently with a clean, soft, dry or lint-free cloth. Clean the surface by rubbing in the direction of the grain using damp lint-free cloth. Avoid using silicone cleaners and waxes.
- Clean up excess water and spills immediately. Use blotting rather than a wiping action. Water left over a long period of time will cause white spots in the finish. Please note that some chemicals may damage the finish.

SIDE

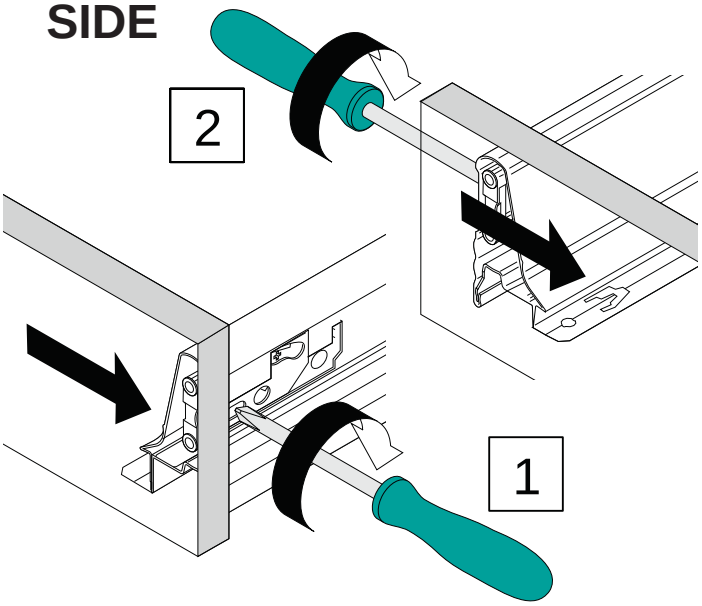

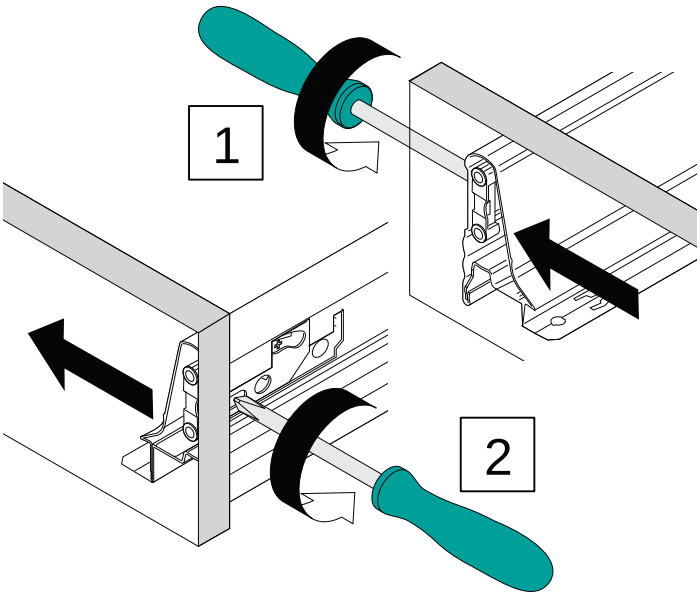

CAM HEIGHT

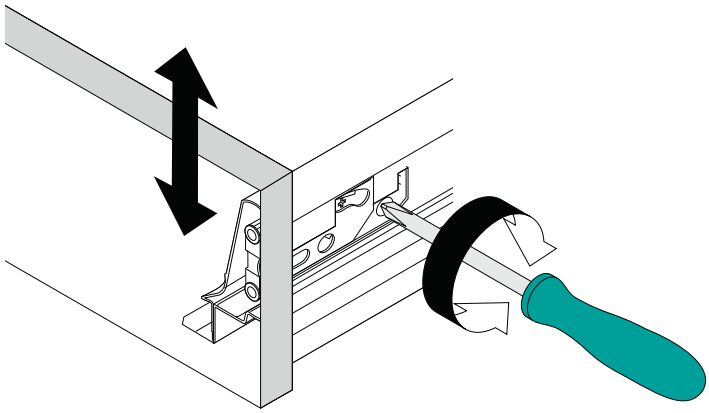

TILT

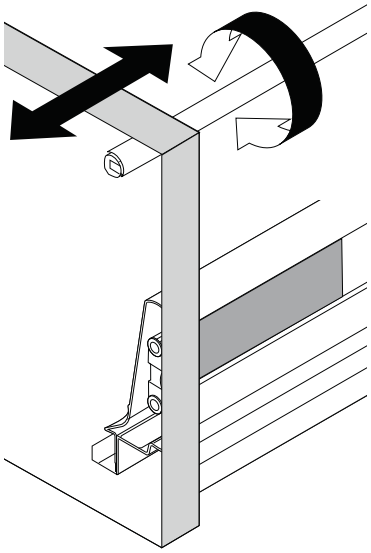

HEMBRY CREEK

INSTALLATION INSTRUCTIONS
CHINA VANITY TOP
SQUARE BOWL
(all sizes)

SUGGESTED TOOLS AND MATERIALS


Silicone Sealant

Level

Tape Measure

Safety Glasses

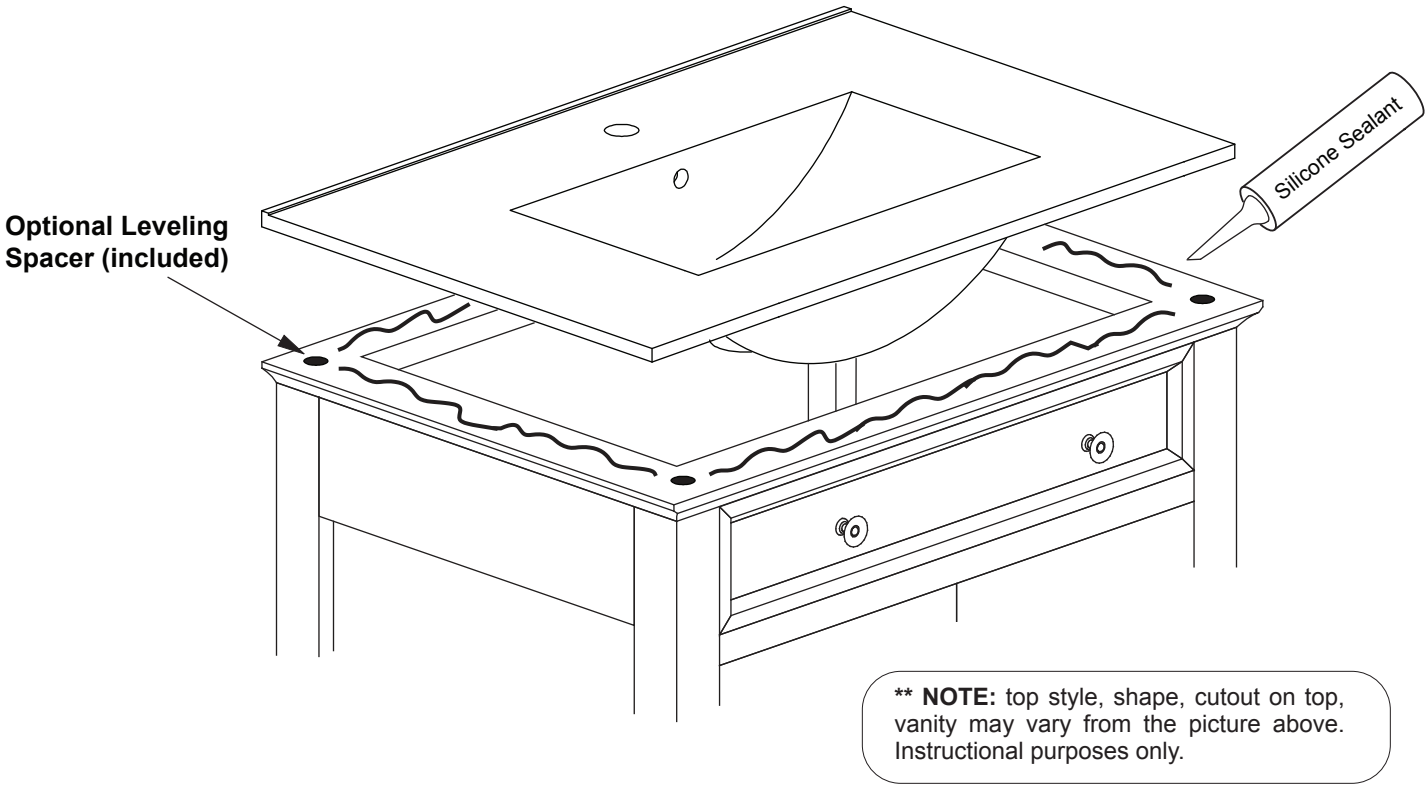

** **NOTE:** top style, shape, cutout on top, vanity may vary from the picture above. Instructional purposes only.

VANITY TOP INSTALLATIONS

1. Install the cabinet / vanity according to the cabinet / vanity manufacturer
2. Check to make sure the vanity top sits level on top of the vanity
3. If all four corners of the vanity top do not sift flush on the vanity, use the optional leveling spacers (included) to help level the vanity top
4. Apply silicone sealant to the top of cabinet / vanity as shown above
5. Install faucet and and drain assembly per the manufacturers' instructions

CARE AND CLEANING

For best results in caring for your vitreous china top, we suggest:
- Always wipe off spills immediately.
- Never use strong / abrasive cleaner. Always test your cleaning solution on unnoticeable areas before applying to the entire surface.
- Wipe surfaces clean, immediately after applying cleaner.
- Do not allow cleaner to sit or soak. Never let cleaners sit on the surface of the vitreous china for long periods of time.
- Use a soft, dampened sponge and cloth. Never use an abrasive material such as brush or scouring pad to clean surfaces. They will scratch the surface of the vitreous china top and lavatory.
- Always rinse and wipe clean the fixtures to prevent soap buildup.